



INSTALLATION OVERVIEW

STEP 1: Fasten Column Posts and Column Belts to existing structural columns.

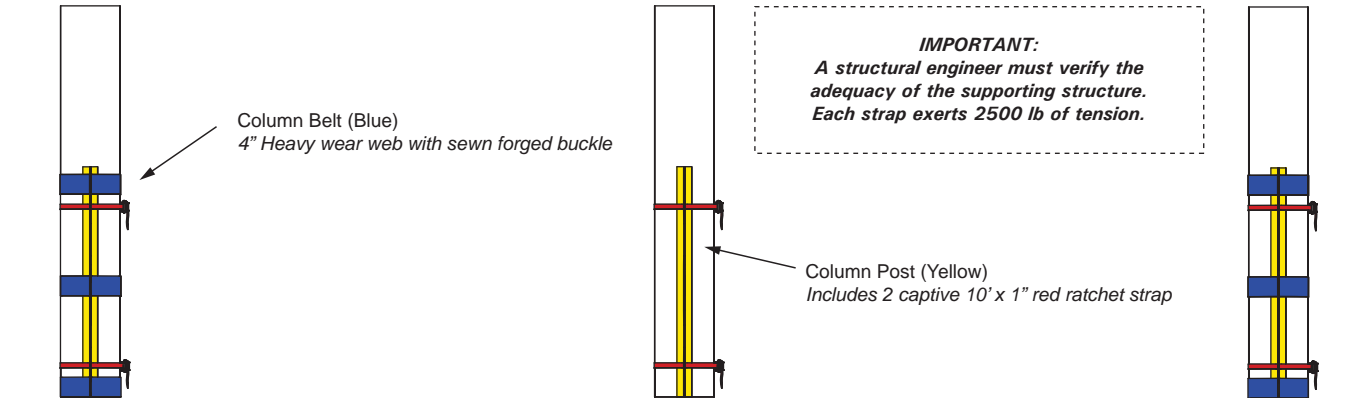

STEP 2: Use Quick Links to connect the Rail & Ratchet Straps to the Column Belts.

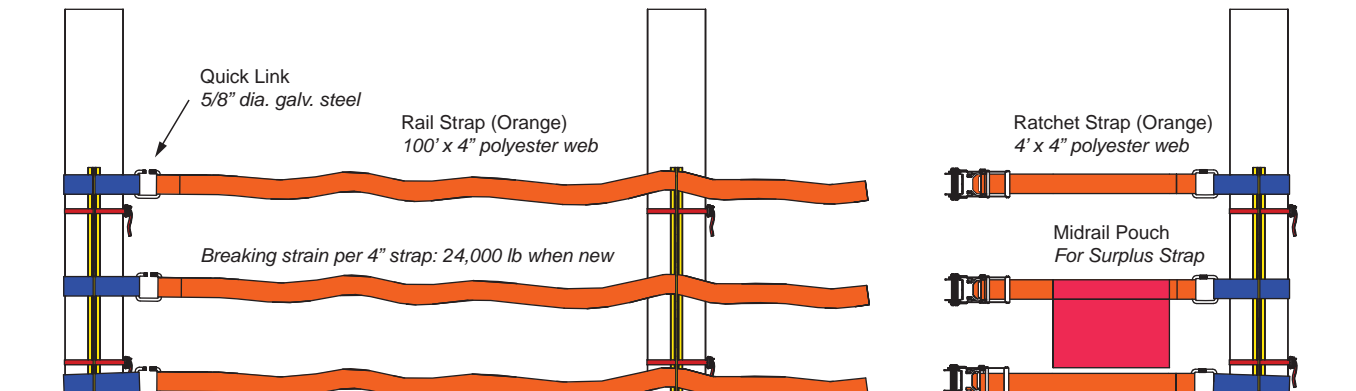

STEP 3: Tension the rail straps. Install Anti-Deflection Posts every 10 feet. Install optional Padlocks (P). For falling object protection attach StrapRail® Netting to the barrier.

