



## INSTALLATION OVERVIEW

**STEP 1:** Drill and bolt the Inline Posts to a **structurally adequate poured concrete slab**. Use 5 approved HILTI anchor bolts per post.

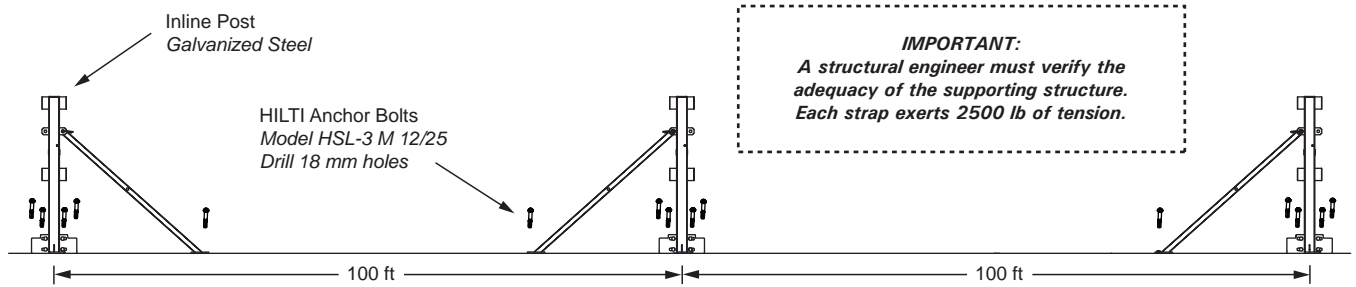

**STEP 2:** Use Quick Links to connect the Rail & Ratchet Straps to the Inline Posts.

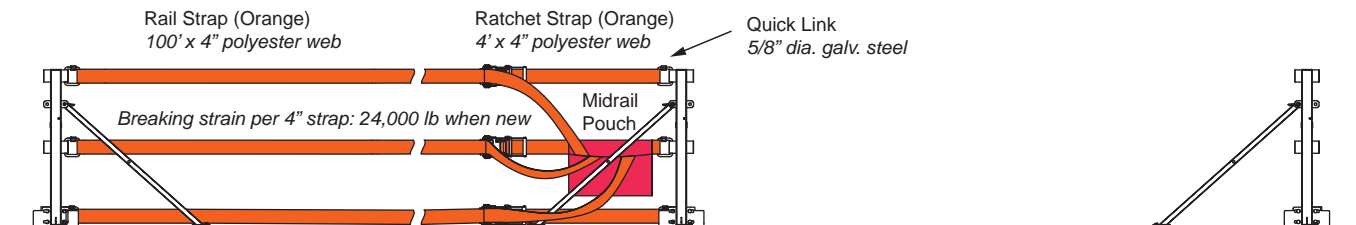

**STEP 3:** Tension the rail straps. Install Anti-Deflection Posts every 10 feet. Install optional Padlocks (P). For falling object protection attach StrapRail® Netting to the barrier.

