



INSTALLATION OVERVIEW

STEP 1: Drill and bolt the Wall Posts to a **structurally adequate poured concrete slab walls**. Use 4 approved HILTI anchor bolts per post.

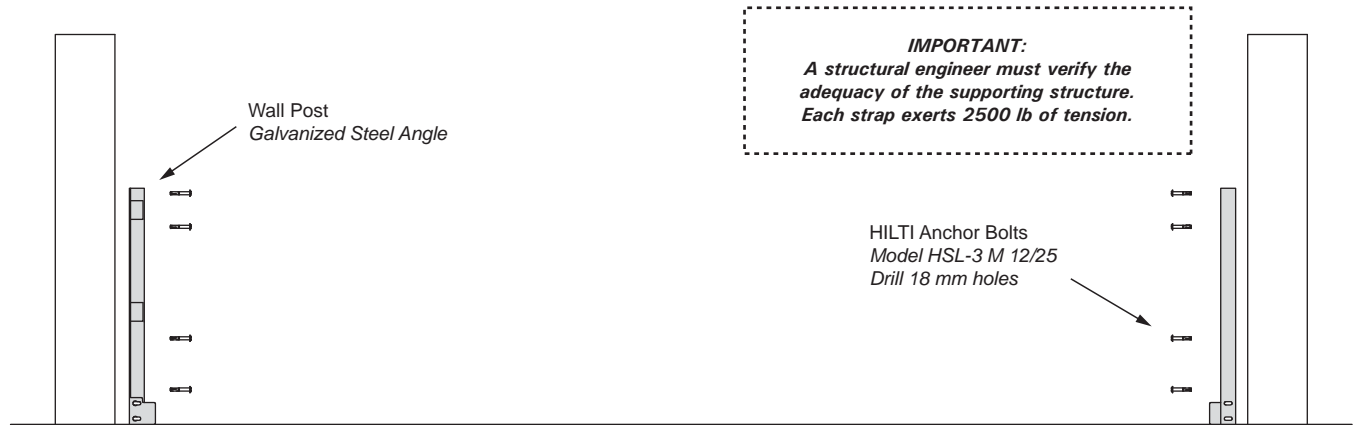

STEP 2: Use Quick Links to connect the Rail & Ratchet Straps to the Wall Posts.

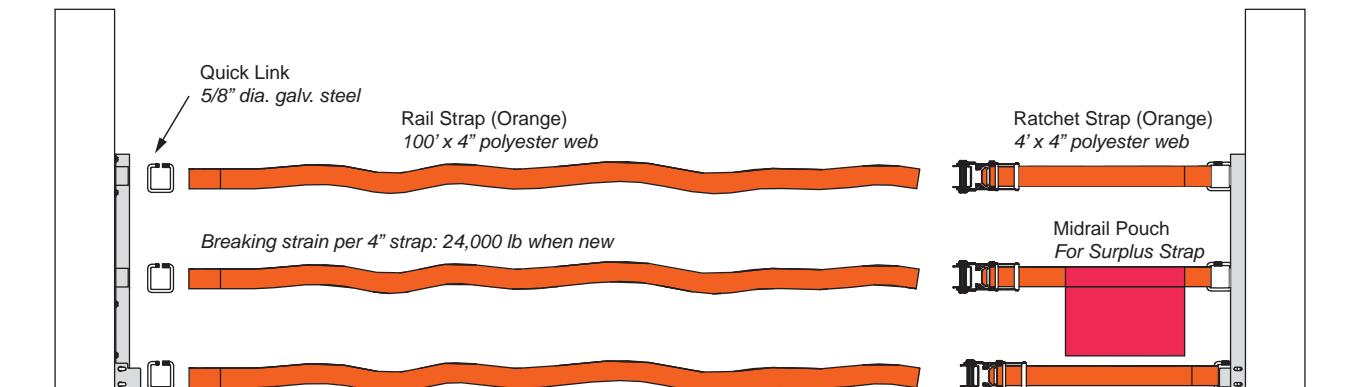

STEP 3: Tension the rail straps. Install Anti-Deflection Posts every 10 feet. Install optional Padlocks (P). For falling object protection attach StrapRail® Netting to the barrier.

